

**IMPORTANT SAFETY INSTRUCTIONS**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

A fire may result if the appliance is not used with care, therefore

- be careful when using the appliance in places where there are combustible materials;
- do not apply to the same place for a long time;
- do not use in presence of an explosive atmosphere;
- be aware that heat may be conducted to combustible materials that are out of sight;
- place the appliance on its stand after use and allow it to cool down before storage;
- do not leave the appliance unattended when it is switched on.

Do not use outdoor. Keep it out reach of children.

Recommended to wear safety goggle while using the heat tool.

Do not touch with water.

**HOT AIR GUN**

Model	Rated Voltage	Rated Frequency	Rated Power input
MF300	AC 230V~	50HZ-60HZ	300W
MF300L	AC 230V~	50HZ-60HZ	300W
MF150	AC 230V~	50HZ-60HZ	150W
MF300D	AC 230V~	50HZ-60HZ	300W
MF300T	AC 230V~	50HZ-60HZ	300W
MF350	AC 230V~	50HZ-60HZ	350W

## HOW TO USE THE HEAT TOOL:

- 1.Plug in the heat tool.
- 2.Hold the product as shown on the picture,Do not touch the hot nozzle.
- 3.Keep 5-6cm distance between the heat tool and item.
- 4.Do not use more than 10 minutes continuously to prevent overheated.


## A FIRE MAY RESULT IF THE APPLIANCE IS NOT USED WITH CARE,THEREFORE:

- 1.Do not use in the presence of an explosive atmosphere.
- 2.Be careful when using the appliance in places where there are combustible materials; Do not apply to the same place for a long time.
- 3.Be aware that heat may be conducted to combustible materials that are out of sight.
- 4.Place the appliance on its stand after use and allow it to cool down before storage.
- 5.Do not leave the appliance unattended when it is switched on.

### Cleaning:

1. Plug off and cool down completely.
2. Wipe the enclosure with moisture cloth and then dry cloth.

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

 Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.