

Please read all information prior to use.

## **WARNING AND CAUTION**

- This product is intended for household or similar use only. Do not use the appliance for any purpose other than its intended use.
- Please ensure the rated voltage of this product is consistent with the voltage you use, and use a three-pin socket with reliable grounding, and do not share a power socket with other electricity to ensure personal safety.
- Please ensure the knob switch is in the "Off (O)" position prior to operating.
- Children should be supervised to ensure they do not play with the appliance.
- To prevent damage to the appliance do not use alkaline cleaning chemicals when cleaning, a soft cloth and mild detergent should be used.
- Do not immerse the appliance in water or any other liquid.
- If cord is damaged, it must be replaced by the manufacturer, its service agent or similar by qualified persons in order to avoid a hazard.
- Unit must always be filled with wax when operating. Never operate when Empty.

## **OPERATING INSTRUCTIONS**

### **IMPORTANT**

- Do not move unit during operation.
- Do not touch the surface of the vessel during operation.
- Do not add wax exceed 80% of the full capacity to prevent liquid overflow and cause electric shock.
- Unit should not be operated without wax inside the vessel.
- Please ensure the knob switch is in the "Off (O)" position prior to operating.

### **MELTING THE WAX**

1. Plug appliance into the power source.
2. Put the wax into the pot, do not exceed 80% of the full capacity, and cover the glass lid.
3. Turn the knob clockwise to the "I" or "II" position, the indicator light will be on, the unit will heat up. First gear ("I" position) is half power operation, second gear ("II" position) is full power operation, it can be adjusted according to personal use.

"I" or "II" both settings can reach 100 °C, "I" works on 300 watts, and "II" works on 600 watts, the larger the power, the faster the heating.

**NOTE:** To monitor the temperature please use a thermometer for an accurate reading

## **CARE & CLEANING INSTRUCTIONS**

Take care when handling the vessel and any metal surfaces whilst it is in use, as these will be hot. Be careful when lifting the lid after heating, as residual heat can result in serious burns. Never place face over vessel.

### **IMPORTANT:**

- Before cleaning, turn off power and unplug from the power source.
- Always wait for the melter vessel and contents to cool down before cleaning the vessel.
- Never immerse in water.
- Never put cold water into the hot melter vessel.
- To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.

### **CLEANING THE VESSEL**

1. When cooled, remove any excess particles.
2. When cooled, wash the interior thoroughly in hot water and a non-abrasive detergent.
3. Remove stubborn spots with a plastic washing pad or sponge.

**WARNING:** Do not use steel wool or coarse scouring pads. These may damage the surface.

4. Dry off with soft cloth.

### **CLEANING THE EXTERIOR**

When cooled, wipe from outside with a damp cloth.

If you have any concerns regarding the performance and use of your appliance, please contact the supplier.

## **TECHNICAL SPECIFICATIONS**

- 1.Model No:HD-Y100
- 2.Power Supply:AC 120V 60HZ
- 3.Energy Consumption:300W/600W
- 4.Capacity:1.7 Litre